

## SEAT BELT LOCK INSTALLATION INSTRUCTIONS

These seat belt locks allow more secure seating during spirited driving, autocross, track days, etc. Unlike some other cars, the standard seat belt in the Lotus Elise does not ratchet back when fully extended (a trick often used on other street cars for track days) so it is always loose when buckled. This lock solves that problem in the simplest way possible.

### Install as follows:

1. The lock will ship assembled. First step is to remove the thumbscrew, careful to not lose the nylon washer:



2. The lock is easiest to install and adjust while in the seat. Buckle the seatbelt as usual and then slip the lock around the shoulder belt with the wide part of the lock facing towards the front:




3. Make sure the belt is centered, then line up the hole and install the thumb screw with washer:



4. Pull the belt to the desired tension and tighten the thumb screw. The cap screw should already be adjusted for the correct spacing, but can be tightened/loosened with a 4mm hex wrench if necessary. Once installed and buckled the lock should rest like this:



5. The lock can be left installed at your preferred tension and changed at any time:

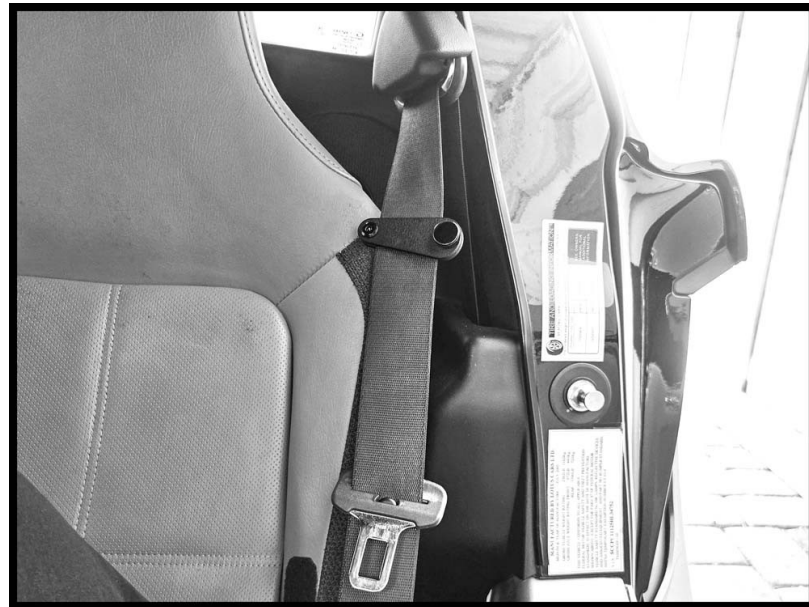

Please use your best judgement with all of the above. Happy driving!

Let me know if you have any trouble. Enjoy!

[info@magicdrillpress.com](mailto:info@magicdrillpress.com)

**MAGIC DRILL PRESS**  
INNOVATIVE DESIGN AND FABRICATION